





TYPE 2s Hinge Installation Instructions

BUILT FOR ALL FAN BASE AND CURB STYLES


Angled Mount

Standard Mount


Flat Mount

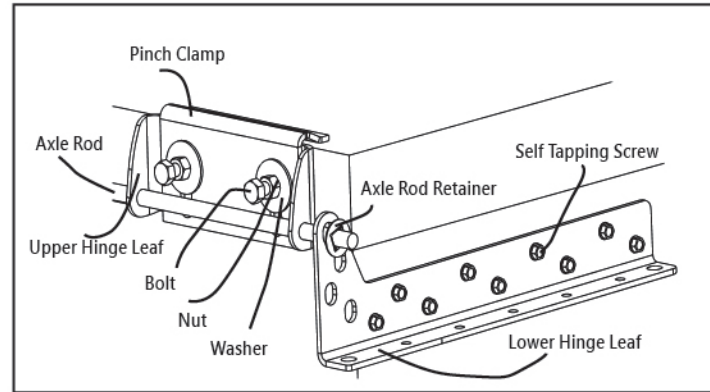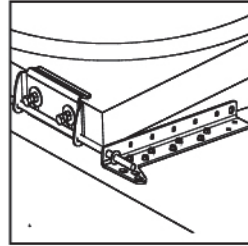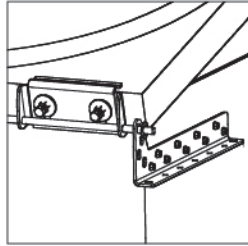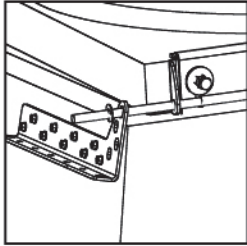


1. Loosely assemble upper hinge leaf as shown. The oval holes on the pinch clamp overlay the threaded holes of the upper hinge. Assemble bolt, nut, washer and thread into the upper leaf.

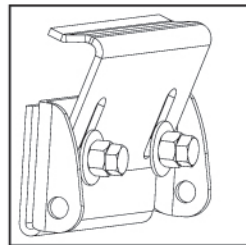


5. Return to upper hinge leaves and tighten the bolt and the lock nut to secure the assembly. Don't over tighten bolts. You want them to firmly contact the lid but not open the J-hook.

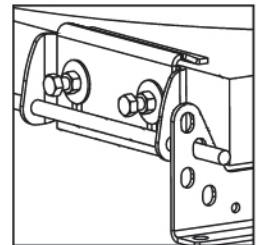


2. Slide upper hinge leaf on lid base. Squeeze pinch clamp down and upper hinge leaf up so they are tight. Hand tighten bolts to temporarily hold upper hinge leaf in place. This aids in axle rod alignment in step 3.

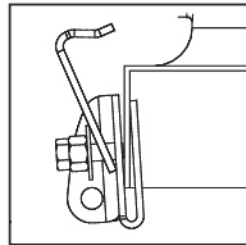


6. Slide the axle rod retainer onto the axle rod on both sides

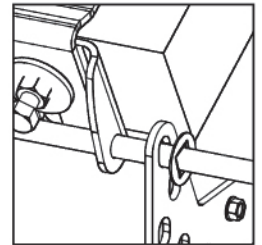


3. Slide the hinge axle rod through both upper hinge leaves.

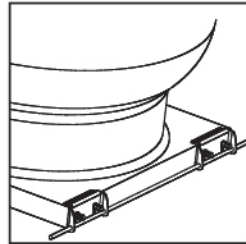

7. Screw chains to front corner of curb. Lean fan back to adjust chain length. Fan should be open so gravity pulls it back against chains. Screw chain into fan base.

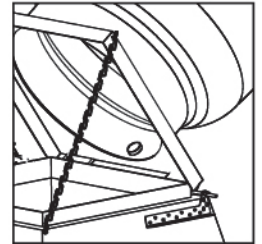

4. Slide lower hinge leaves onto axle rod and up to curb surface that works best for the installation. Using the supplied self tapping screws connect it to the curb.

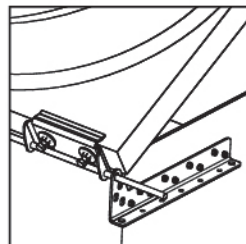

8. If the stainless steel axle rod extends more than 2" past the lower hinge leaf, it must be cut off using a powered abrasive wheel.

